

 
How it works?



The INOGENI REMOTE is a device that can control the mixing function of SHARE2/SHARE2U and the switching function of CAM300/CAM230 devices. You just need to apply correct wiring between the REMOTE and the INOGENI device. You will then be able to communicate with the device using the push buttons at the top of the device.

Connectivity

For SHARE2 – Use a simple RJ45 cable



! Do not plug the cable to the LAN connection of the SHARE2. Plug it to the RS232 port.


For SHARE2U, CAM300 and CAM230 series – Use a RJ45 cable to a terminal block plug.



! Do not plug a RJ45 cable between the INOGENI device and the REMOTE.

Terminal block:

- Pin 1: Receive
 - Pin 2: GND
 - Pin 3: Transmit
 - Pin 4: 5V supply
- RJ45:**
- Pin 1: 5V supply
 - Pin 2,3,4,5: NC
 - Pin 6: GND
 - Pin 7: RX
 - Pin 8: TX

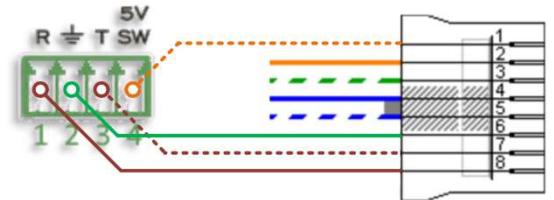

Regarding +5V supply for REMOTE:



Under SHARE2/SHARE2U and CAM300/CAM230, make sure to put switch number 6 to ON position.

Technical support

If you need any support on how to operate this device, contact us at support@inogeni.com for further assistance.

Contact us

Come visit us if you have special needs or requirements. We are your specialists for custom USB 3.0, HDMI and SDI professional products tailored to your needs.

INOGENI, Inc.
1045 Wilfrid-Pelletier Avenue – Suite 101
Quebec City, QC, G1W 0C6
Canada