

## How it works?



The **INOGENI REMOTE** is a device that can control the mixing function of **SHARE2/SHARE2U** and the switching function of **CAM-300** devices. You just need to apply correct wiring between the REMOTE and the INOGENI device. You will then be able to communicate with the device using the push buttons at the top of the device.

## Connectivity

### For SHARE2 Use a simple RJ45 cable

Do not plug the cable to the LAN connection of the SHARE2. Plug it to the RS232 port.

### For SHARE2U and CAM-300 Use a RJ45 cable to a terminal block plug.

Do not plug a RJ45 cable between the SHARE 2U or CAM300 device and the REMOTE.

#### INOGENI device side

Pin 1: Receive  
Pin 2: GND  
Pin 3: Transmit  
Pin 4: 5V supply

#### REMOTE side

### Regarding +5V supply for REMOTE:



Under SHARE2/SHARE2U and CAM300, make sure to put switch number 6 to ON position.

## Technical support

If you need any support on how to operate this device, contact us at [support@inogeni.com](mailto:support@inogeni.com) for further assistance.

## Contact us

Come visit us if you have special needs or requirements. We are your specialists for custom USB 3.0, HDMI and SDI professional products tailored to your needs.

INOGENI, Inc.  
979 Ave de Bourgogne Suite 530  
Québec  
G1W 2L4 (QC) Canada

© Copyright 2022. INOGENI, Inc. All rights reserved.