

INOGENI SHARE_{2U}

Dual USB 2.0 Video to USB 3.0 Converter User Guide v1.3



Thank you!

You have just acquired the finest and easiest to use tool for simultaneous capture of two streams of uncompressed video with audio for your computer.

**Easy, No Drivers, No Setup !
Versatile !
Compatible with all Apps !**

SHARE2U CONVERTER P/N SHARE2U

PRODUCT HIGHLIGHTS

- EASY ! No drivers required
- Capture from MJPEG and H264 USB 2.0 cameras, which are UVC-compliant
- Capture HDMI feeds
- Predefined Picture in Picture (PIP) views
- Ideal for Video streaming and Videoconferencing
- Compatible to all motherboards and chipsets
- Powered via external power supply
- Scaler and Colorspace Conversion
- Supports Windows, OSX and Linux
- Audio mixing capability
- DirectShow, AVFoundation and V4L2 Compatible
- Professional grade full-metal enclosure

OVERVIEW

The **INOGENI SHARE2U Converter** is the most easy and reliable tool for simultaneous capture of two webcam and HDMI feeds into one single USB stream with audio for your PC for recording, videoconferencing, lecture capture and streaming applications. No driver installation is necessary and it will work on all motherboards and USB 3.0 chipsets. It features two USB inputs, one HDMI input, a line level stereo analog input, a line level stereo analog output, an internal USB 3.0 hub with 2x USB 3.0 ports for expansion purposes and USB 3.0 connector for the host. It supports SD and HDTV video formats, up to 1080p60, and most computer graphic formats. Compact in size and rugged, the converter is a practical and an easy-to-use USB 3.0 capture solution. It is compatible with Windows, OSX and Linux operating systems, and is UVC-compliant, so it will work with all DirectShow/V4L2 and AVFoundation compatible software.

The converter supports 1080p resolutions up to 30 fps for USB and HDMI inputs. The line level stereo analog audio input and output are two-channel LPCM.


SHARE2U comes with a USB 3.0 cable and its power supply.

- Line level stereo audio support
- Predefined Picture in Picture (PIP) views
- Digital Fluid technology - Internal frame buffers maximize frame rate with any PC
- Hardware-based color space and sampling conversion
- Automatic scaling and frame rate conversion
- Customizable video processing functions
- Image controls: Brightness, contrast, saturation and hue settings
- Supports multiple devices on the same PC.
- Compatible with Windows, Mac OSX and Linux.

DEVICE CONNECTORS



CONNECTION DIAGRAM

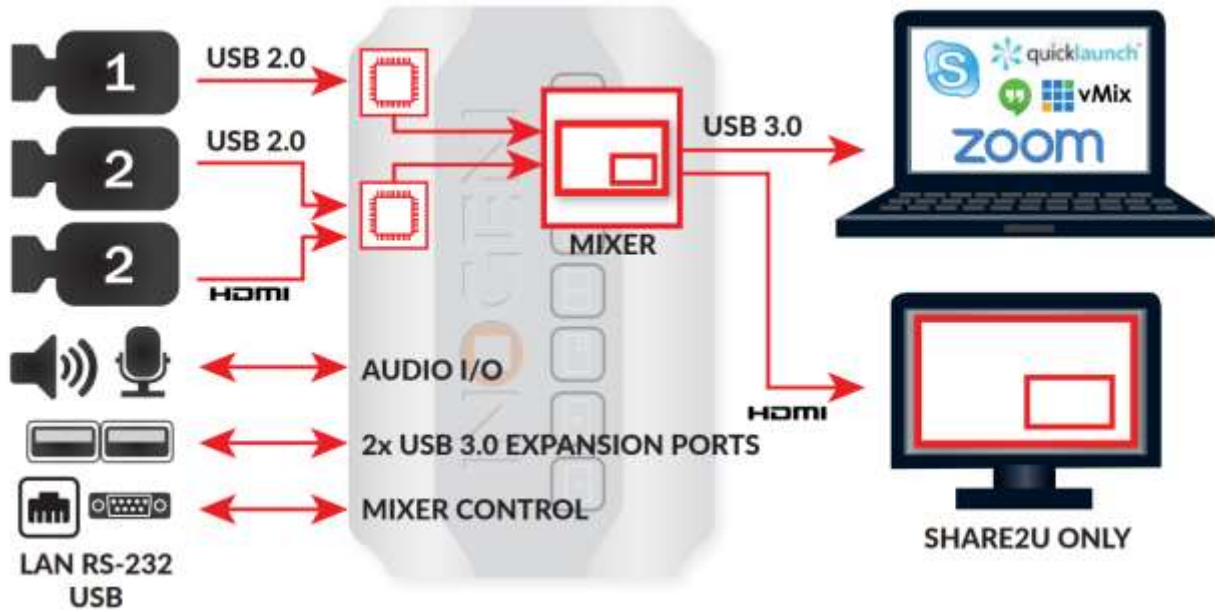

SPECIFICATIONS

Video Input 1	
Connector	1 x USB 2.0 camera (MJPEG or H264)
Video Resolutions	Depends on the camera specifications
Video Input 2	
Connector	1 x USB 2.0 camera (MJPEG or H264)
Video Resolutions	Depends on the camera specifications
Connector	1 x HDMI
Video Resolutions	1080p, 720p and 640x480
Frame Rates	Up to 30 Hz, all formats
Analog input	Analog stereo, line level, 3.5mm jack.
Analog output	Analog stereo, line level, 3.5mm jack.
HDCP Copy protection	The device will not decrypt BD/DVD movies, satellite/cable receivers or other encrypted sources.
Mixer Control	<p>The Mixer feature can be controlled by the following interfaces:</p> <ul style="list-style-type: none"> HID RS-232 Keypad INOGENI REMOTE LAN <p>*** Click 2 times on “2” button of the keypad in order to switch between USB and HDMI inputs. Same behavior with all the other control interfaces.</p>

Output	
Connectors	1 x USB 3.0 to host 1 x HDMI output Same video content over USB 3.0 and HDMI outputs
Color Space	YCbCr (YUY2) 4:2:2 8-bit
Video Scaler	Automatic hardware based
Color Space Conversion	Automatic hardware based
Sampling Conversion	Automatic hardware based
Frame Rate Conversion	Automatic hardware based
USB expansion	2 x USB 3.0 ports for expansion purposes. The devices connected will appear to the host.

Audio	
Audio input	2-channel LPCM 48kHz audio from Line input or embedded in HDMI
Audio output	2-channel LPCM 48kHz audio Line level

Compatibility	
Operating System	NO driver installation necessary. Windows 7 and above (32/64-bit) OSX 10.10 and above Linux (kernel v2.6.38 and above) Android
Host Requirements	USB 3.0 port Minimum 4GB RAM Intel Core i5 Graphic card with its own memory for on-screen rendering applications.
Motherboard	Compatible with all motherboards Intel, Renesas, ASMedia, and Fresco Logic
Cameras Supported	UVC-compliant cameras for USB inputs. HDMI sources up to 1080p30.
Software Compatibility	UVC-compliant Runs with all software compatible to DirectShow, V4L2, QuickTime and AVFoundation.


Dimensions [W x L x H, cm]	18.5 x 11 x 3
Weight [g]	466
Power	12V, 700mA (adapter included)
UPC Code	040232355523
Origin	Canada
Harmonized Code	8517.62.000.900

SERIAL COMMUNICATION PROTOCOL

The device baud rate is 9600. This setting is configured using the appropriate firmware.

Terminal block pinout

As written on the back of the device, here is the pinout of the terminal block.

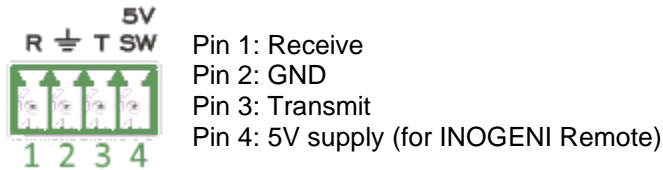


Commands

If the commands are recognized, the “**ACK**” string will be sent.

If the commands are NOT recognized, the “**NACK**” string will be sent.

Input 1 is the **USB input 1**.

Input 2 is the **USB input 1 OR HDMI input**.

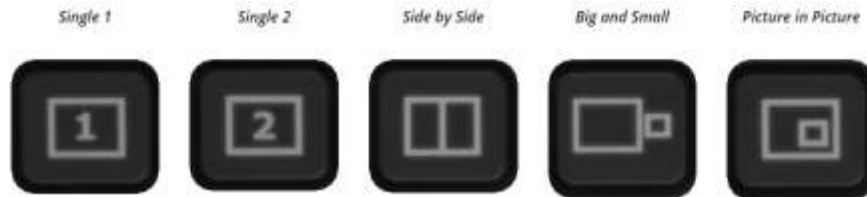

Commands sent to the serial interface must have the ‘<’ character at the beginning and ‘>’ character at the end.

COMMAND	Command description
<S1>	Source 1, which comes from the USB input 1 connector
<S2>	Source 2, which comes from the USB input 1 or HDMI connector
<SS>	Side by Side View
<BS>	Big and Small View
<PPTR>	Picture in Picture at top right corner
<PPTL>	Picture in Picture at top left corner
<PPBR>	Picture in Picture at bottom right corner
<PPBL>	Picture in Picture at bottom left corner
<SW>	Swap View
<SS1>	Side by Side View where Input 1 is at the left side
<SS2>	Side by Side View where Input 2 is at the left side
<BS1>	Big and Small View where Input 1 is at the left side
<BS2>	Big and Small View where Input 2 is at the left side
<PPTR1>	Picture in Picture at top right corner where Input 1 is the background
<PPTR2>	Picture in Picture at top right corner where Input 2 is the background
<PPTL1>	Picture in Picture at top left corner where Input 1 is the background
<PPTL2>	Picture in Picture at top left corner where Input 2 is the background
<PPBR1>	Picture in Picture at bottom right corner where Input 1 is the background

<PPBR2>	Picture in Picture at bottom right corner where Input 2 is the background
<PPBL1>	Picture in Picture at bottom left corner where Input 1 is the background
<PPBL2>	Picture in Picture at bottom left corner where Input 2 is the background
<SAVE>	Save the current configuration onboard for future use
<RSTR>	Erase the current configuration onboard and return to default values
<BLK>	Black video
<SHW>	Show video
<RST>	Reset the device
<SWUSB>	Select USB source as input 2.
<SWHDMI>	Select HDMI source as input 2.
<POLL>	Returns the current view of the device. In case PPTL1 mode is active, you will receive: <pre>>> <POLL> VIEW => S1 BLACK => disabled ACK</pre>
<GET>	Return the firmware versions and video. Here is an example. <pre>>> <GET> StreamerApp => 1.4.1 DeviceID => 0 FX3 => N/A FPGA => N/A EDID => N/A Input 1 => 1920x1080 MJPEG Input 2 => Unlocked Input 3 => Unlocked VIEW => S1 BLACK => disabled IP => 192.168.0.29 MAC => f8:dc:7a:5:76:8 ACK</pre>

INOGENI REMOTE



The INOGENI Remote needs to be connected to the terminal block port in order to operate. Apply wiring accordingly. This remote is sending serial commands to the SHARE2U device. Make sure to set the **DIP SW6** in order to apply power to the remote before going further. See “DIP SWITCHES” section of this document for more details. Check the user manual of the INOGENI REMOTE for more details.

For SHARE2U and CAM series – You need to wire up a RJ45 cable to a terminal block plug.




Do not plug a RJ45 cable between the INOGENI device and the REMOTE.

INOGENI device side



Pin 1: Receive
 Pin 2: GND
 Pin 3: Transmit
 Pin 4: 5V supply

REMOTE side

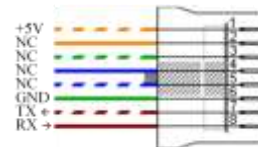

LAN INTERFACE

The default IP address of the device is **192.168.0.81**. Use our Control App in order to change it.

You can use any telnet application in order to communicate with the device using TCP. Make sure to use the right IP address and **port 50000**.



You can use the commands by sending HTTP or TCP requests. For example, you can send an HTTP request by sending it using any browser, for example, to 192.168.0.81:50000/COMMAND. If the command is recognized, you will receive the ACK string.

Commands sent to the serial interface must have the '\$' character at the beginning and '\$' character at the end.

COMMAND	Command description
\$\$S1\$	Source 1, which comes from the USB input 1 connector
\$\$S2\$	Source 2, which comes from the USB input 1 or HDMI connector
\$\$\$	Side by Side View
\$\$BS\$	Big and Small View
\$\$PPTR\$	Picture in Picture at top right corner
\$\$PPTL\$	Picture in Picture at top left corner
\$\$PPBR\$	Picture in Picture at bottom right corner
\$\$PPBL\$	Picture in Picture at bottom left corner
\$\$SW\$	Swap View
\$\$\$S1\$	Side by Side View where Input 1 is at the left side
\$\$\$S2\$	Side by Side View where Input 2 is at the left side
\$\$BS1\$	Big and Small View where Input 1 is at the left side
\$\$BS2\$	Big and Small View where Input 2 is at the left side
\$\$PPTR1\$	Picture in Picture at top right corner where Input 1 is the background
\$\$PPTR2\$	Picture in Picture at top right corner where Input 2 is the background
\$\$PPTL1\$	Picture in Picture at top left corner where Input 1 is the background
\$\$PPTL2\$	Picture in Picture at top left corner where Input 2 is the background
\$\$PPBR1\$	Picture in Picture at bottom right corner where Input 1 is the background
\$\$PPBR2\$	Picture in Picture at bottom right corner where Input 2 is the background
\$\$PPBL1\$	Picture in Picture at bottom left corner where Input 1 is the background
\$\$PPBL2\$	Picture in Picture at bottom left corner where Input 2 is the background
\$\$SAVE\$	Save the current configuration onboard for future use
\$\$RSTR\$	Erase the current configuration onboard and return to default values
\$\$BLK\$	Black video
\$\$SHW\$	Show video

\$RST\$	Reset the device
\$POLL\$	Returns the current view of the device. In case PPTL1 mode is active, you will receive: VIEW => S1 BLACK => disabled ACK
\$GET\$	Return the firmware versions and video resolutions of CAM and CONT inputs. Here is an example. StreamerApp => 1.4.1 DeviceID => 0 FX3 => N/A FPGA => N/A EDID => N/A Input 1 => 1920x1080 MJPEG Input 2 => Unlocked Input 3 => Unlocked VIEW => S1 BLACK => disabled IP => 192.168.0.29 MAC => f8:dc:7a:5:76:8 ACK

DIP SWITCHES

The device have DIP switches below the device in order to force settings. Here are the functions of the DIP switches.

SW1		For future use
SW2		For future use
SW3	OFF	Frame buffer frequency is set to 60Hz. (default)
	ON	Frame buffer frequency is set to 50Hz.
SW4		Reserved
SW5		Reserved
SW6	OFF	Disable 5V on terminal block. (default)
	ON	Enable 5V on terminal block. This switch must be set in order to power up the connected remote.

AUDIO CONTROL

The device embeds an audio mixer. You have complete control over USB 2.0 and HDMI inputs and output. You can also mute and adjust gain on I/Os. You can click “Apply” button in order to keep configuration at each bootup. You can also restore default configuration by clicking “Restore defaults” button.


There are two modes for the audio mixer:

Automatic audio selection:

This mode gives priority on the analog input as soon. Otherwise, USB inputs are sent over USB. HDMI input audio is always mixed with the USB 2.0 and/or analog inputs. You can mute HDMI audio by clicking on MUTE button.

Mix audio:

This mode mixes audio from all USB 2.0 and analog inputs. HDMI input audio is always mixed with the USB 2.0 and/or analog inputs. You can mute HDMI audio by clicking on MUTE button.

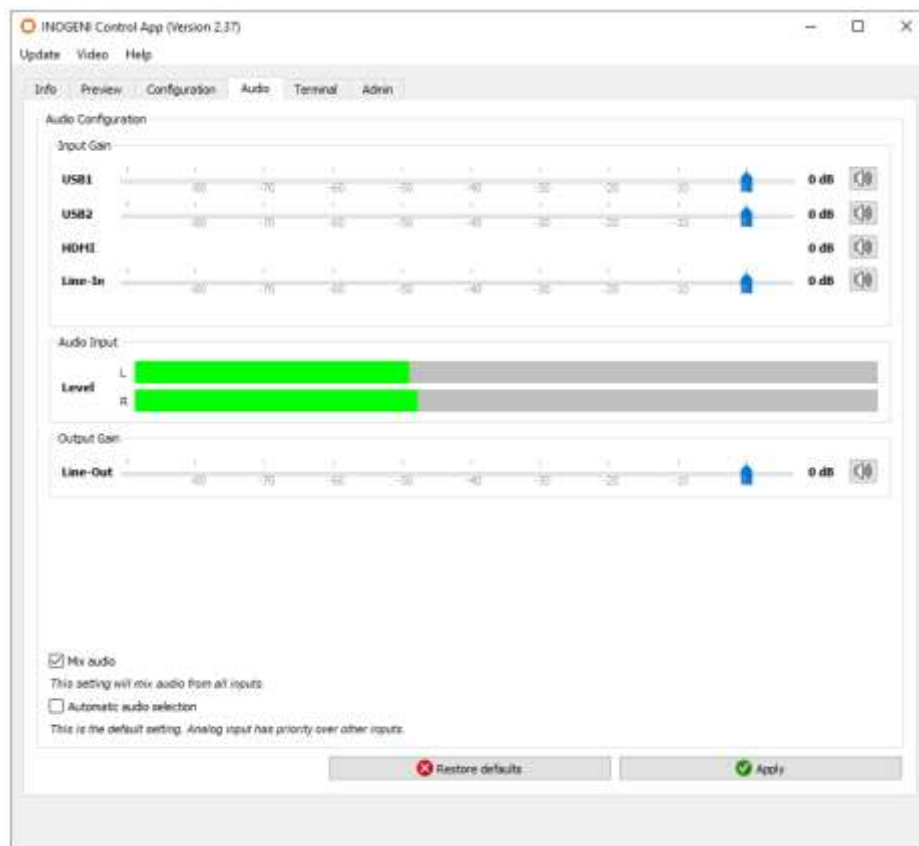

INOGENI CONTROL APP

The INOGENI Control App allows you to control and monitor video sources.



The device has its own application in order to control the Mixer configuration using the USB HID or the LAN interfaces.

You can also monitor the firmware versions installed on the device and the status of the USB and HDMI inputs.

You can update your device to the latest firmware using the Update menu. The C++ source code of this application is available on demand.

Visit the Software Update page under the INOGENI SHARE2U section for more details.

CRESTRON MODULES

You can use the Crestron modules in order to control the INOGENI SHARE2U device using the serial or the IP connections. These modules are available on our website under the section Software Update. Refer to the Help file on how to use the modules.



SUPPORT

Engineered by video professionals, for video professionals, it is your most compatible USB 3.0 device. INOGENI expertise at your fingertips:

- **Expert Technical Support team** at support@inogeni.com for immediate help or if you have any technical question about our products.
- You can visit our list of compatible [USB 2.0 cameras](#) to see if this one fits the device.
- Extensive **Knowledge Base** to learn from other customers experiences.

© Copyright 2019 by INOGENI INC. All Rights Reserved.

INOGENI name and logo are trademarks or registered trademark of INOGENI. Use of this product is subject to the terms and conditions of the license and limited warranty in effect at the time of purchase. Product specifications can change without notice.

INOGENI, Inc.
979 de Bourgogne avenue, suite 530
Québec
G1W 2L4 (QC) Canada